SCOSCHE®

KA2093B

DIN / DOUBLE DIN
IN-DASH STEREO INSTALLATION KIT FOR
2007-UP KIA SPECTRA / SPECTRA 5

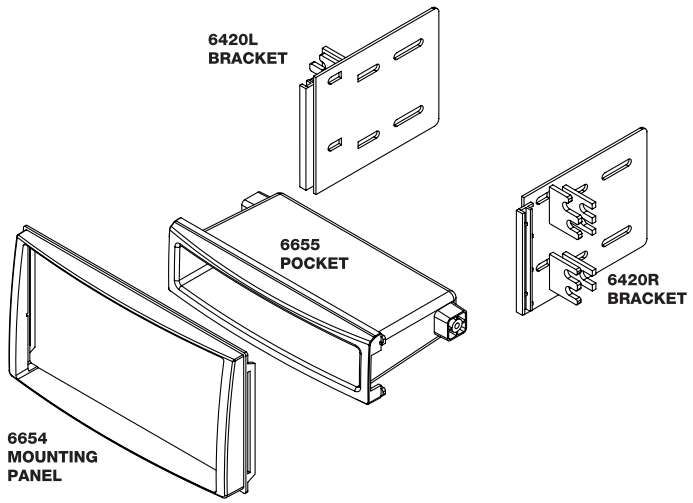

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2007-up Kia Spectra and Spectra 5 vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (KA2093B) in 2007-up Kia Spectra and Spectra 5 vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2008 SCOSCHE INDUSTRIES, INC.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

KA01B
2000-UP Kia

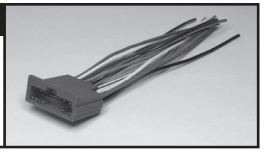

FACTORY STEREO REMOVAL

2007-UP KIA SPECTRA/SPECTRA 5

1. With panel removal tool (PRT) pop up trim around shifter.
2. Remove (4) Phillips screws securing bottom of stereo trim bezel.
3. Starting at bottom, unsnap panel.
4. Disconnect harnesses and remove.
5. Remove (4) Phillips screws securing stereo.

MOUNTING THE STEREO

DIN-ISO MOUNT

1. Prepare the 6420 left & right mounting brackets for installation (Fig 1).
2. Snap the 6420 left & right brackets to the mounting locations on the 6654 kit panel.
3. Align the 6655 pocket to the 6654 panel, and install with the screws supplied in the kit.
4. Align position and bolt the aftermarket DIN-ISO head unit to the mounting brackets. Use hardware supplied with the aftermarket stereo to secure the brackets to the stereo.

DOUBLE DIN-ISO MOUNT

1. Prepare the 6420 left and right mounting brackets for installation (Fig 1).
2. Snap the 6420 left and right mounting brackets to the mounting locations on the 6654 kit panel.
3. Align position and bolt the aftermarket DOUBLE DIN head unit to the mounting brackets. Use hardware supplied with the aftermarket stereo to secure the brackets to the stereo.

Note: If the hardware is not supplied with aftermarket stereo use hardware from factory stereo.